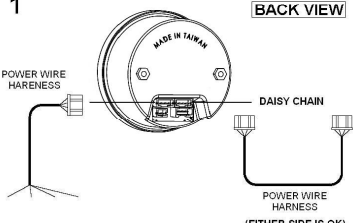
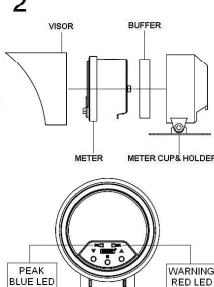
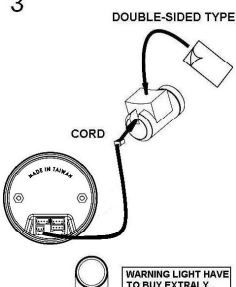
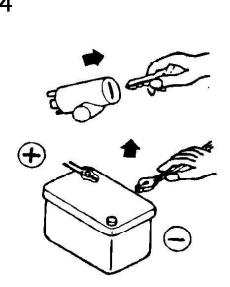
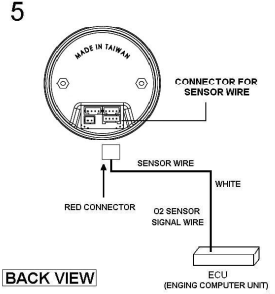
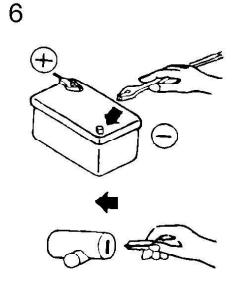
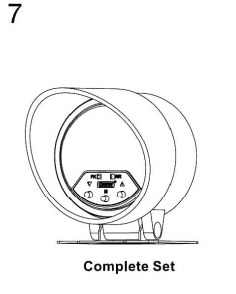


ELECTRICAL GAUGES W/WARNING & PEAK

60mm LCD EVO SERIES WHITE / RED / GREEN / BLUE LED DISPLAY

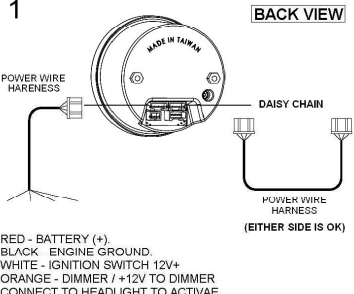
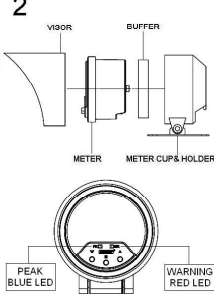
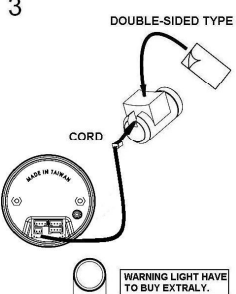
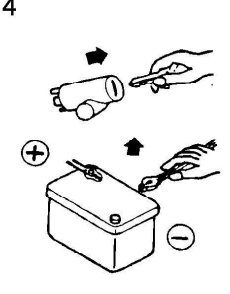
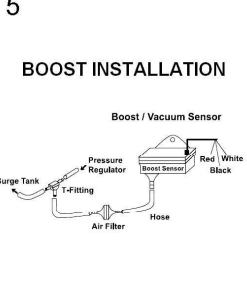
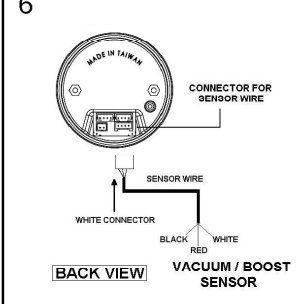
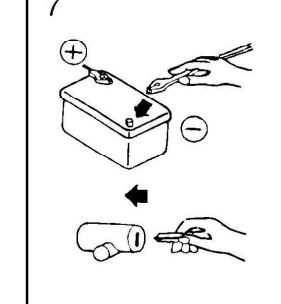
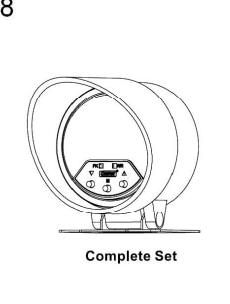
Air fuel / ratio

OPENING CEREMONY

1 BACK VIEW  POWER WIRE HARNESS DAISY CHAIN POWER WIRE HARNESS (EITHER SIDE IS OK) RED - BATTERY (+) BLACK - ENGINE GROUND. WHITE - IGNITION SWITCH 12V+ ORANGE - DIMMER / +12V TO DIMMER CONNECT TO HEADLIGHT TO ACTIAE.	2  VISOR BUFFER METER METER CUP & HOLDER PEAK BLUE LED WARNING RED LED	3 DOUBLE-SIDED TYPE  CORD WARNING LIGHT HAVE TO BUY EXTRALY.	4  + -
5 BACK VIEW  CONNECTOR FOR SENSOR WIRE SENSOR WIRE RED CONNECTOR O2 SENSOR SIGNAL WIRE ECU (ENGINE COMPUTER UNIT)	6  + -	7  Complete Set	

Boost / Vacuum Gauge

OPENING CEREMONY

1 BACK VIEW  POWER WIRE HARNESS DAISY CHAIN POWER WIRE HARNESS (EITHER SIDE IS OK) RED - BATTERY (+) BLACK - ENGINE GROUND. WHITE - IGNITION SWITCH 12V+ ORANGE - DIMMER / +12V TO DIMMER CONNECT TO HEADLIGHT TO ACTIAE.	2  VISOR BUFFER METER METER CUP & HOLDER PEAK BLUE LED WARNING RED LED	3 DOUBLE-SIDED TYPE  CORD WARNING LIGHT HAVE TO BUY EXTRALY.	4  + -
5 BOOST INSTALLATION  Boost / Vacuum Sensor Surge Tank Pressure Regulator Boost Sensor Red / White Black T-fitting Air Filter Hose	6 BACK VIEW  CONNECTOR FOR SENSOR WIRE SENSOR WIRE WHITE CONNECTOR BLACK RED WHITE VACUUM / BOOST SENSOR	7  + -	8  Complete Set

60mm EVO SERIES OPERATION INSTRUCTIONS

There are five setting modes in this gauge, **Backlight color Mode**, **Peak Mode**, **Warning Mode**, **Backlight Brightness Mode**, and **Sound Mode**. In any time when the gauge is in the normal mode, the Backlight color Mode can be operated by pressing < ▲ > or < ▼ >. Press < M > to enter into the Peak Mode.

1. Backlight color Mode:

- 1) There are four different color LED backlight display in one gauge: White, Red ,Green and Blue.
- 2) Press < ▲ > or < ▼ > to select a backlight color in sequence.

2. Peak Mode:

- 1) Press < M > to enter into the Peak Mode.
- 2) After 5-second of no button activity or press < M >, the gauge will return to the normal mode.
- 3) When the peak value is displayed, press and hold < M > 3-second to clear the previous peak value.

3. Warning Mode:

- 1) Hold < M > for 3-second to enter to the warning mode.
- 2) When the WR LED is flashing, press < ▲ > or < ▼ > to adjust the warning value.
- 3) Press < M > or after 5-second of no button activity, the gauge will return to the normal mode.

4. Backlight Brightness Mode

There are six-stage for each daytime and nighttime backlight brightness available for users to select the preferred brightness.

- 1) Hold < ▲ > for 3-second to enter to the backlight brightness mode. When the PK and WR LED are flashing, the daytime brightness can be selected.
- 2) Press either < ▲ > or < ▼ > to select the backlight brightness.
- 3) In order to set the nighttime backlight brightness, the orange wire of the power wire harness should be connected to Dimmer/ 12V switched source (+).
- 4) When Dimmer/ 12V switched source (+) is on, the nighttime brightness can be selected.
- 5) Press < M > or after 5-second of no button activity, the gauge will return to the normal mode.

5. Sound Mode:

- 1) Hold < ▼ > for 3-second to switch the sound.
- 2) When the sound is enabled, you will hear two beep, vise versa, when it is disabled, you will hear one beep sound.