Digital Lcd Boost Gauge

Blue / Red Display

Brightness Control Switch *Note Do not over tighten these bolts. Green Orange Black White Red

Wiring Instructions

Red- 12v accessory Power (+)
Black- Ground negative (-)
White- Engine Accessory power
Orange- Head light switch (12v switch power)
Green-Boost Sensor
(connect to white wire from sensor)

Lighting Diagram

Day Time	Night Time	Installation
Blue	Blue	White — Connect to acc. Power Amber — Do not connect
Red	Red	White — Do not connect Amber — Connect to acc. Power
Blue	Red	White — Connect to acc. Power Amber — Connect to parking lamp
Red	Blue	Amber — Connect to acc. Power White — Connect to parking lamp



