


ELECTRICAL GAUGES W/WARNING

SMOKE LENS & ANGEL RING GAUGE SUPER WHITE LED DISPLAY


Tachometer

OPENING CEREMONY


1 CYLINDER SELECTION SWITCH [BACK VIEW]

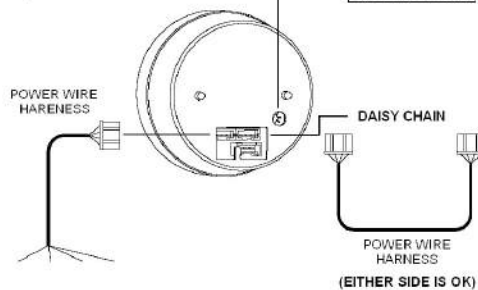


2

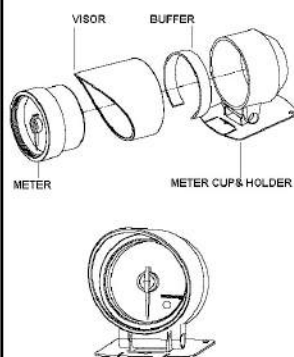


3

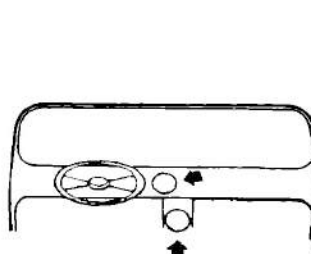

4

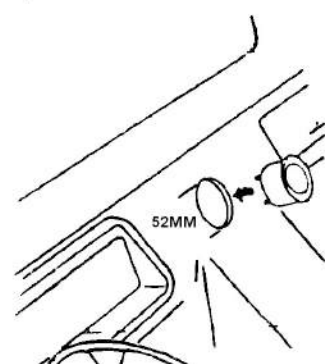


5

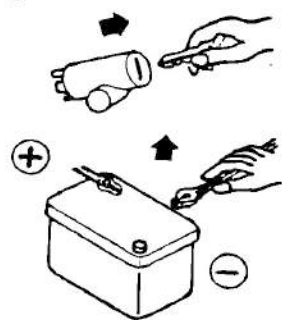


6

** The warning is tachometer exceed 6000RPM.

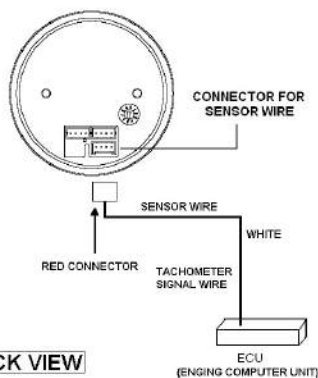


7

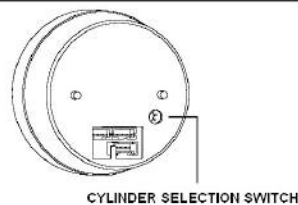

1. Selecting Number of Cylinders:
Setting the tachometer for 4, 6 or 8 (4, 6 or 3) cylinder operation is achieved simply by sliding the switch, located on back of the tachometer body, to coincide with the appropriate number of cylinders of the engine.
2. Switch position:
0=10 cylinders, 1=1 cylinders, 2=2 cylinders, 3=3 cylinders, 4=4 cylinders, 5=cylinders,.....
3. When setting the number of cylinders for a rotary engine, set the cylinders number selection to 4 cylinders for 2 rotors, and to 6 cylinders for 3 rotors.
4. The red or black wire MUST be removed before adjustment to the cylinder setting is made from the cylinder selector switch.


8

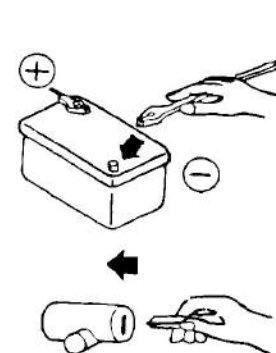


Voltmeter

OPENING CEREMONY


1 [BACK VIEW]

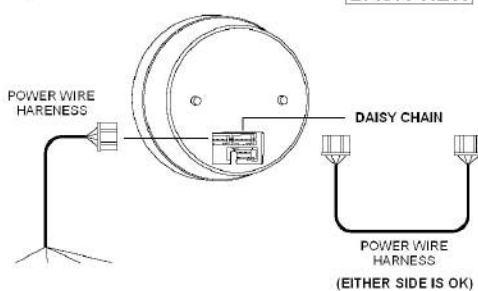


2

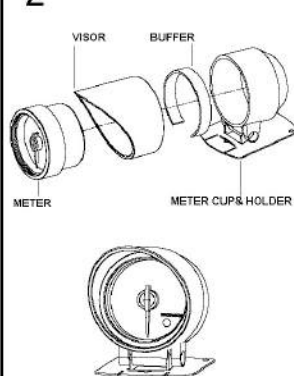


3

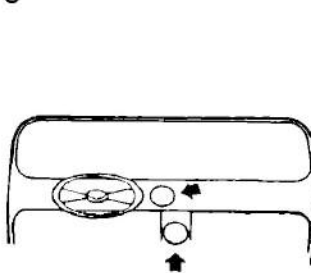

4

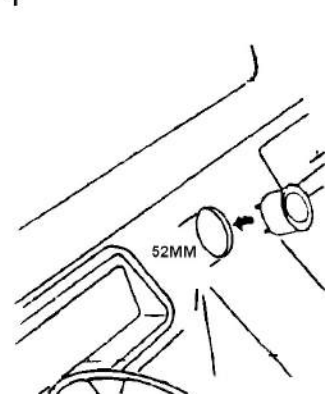


5

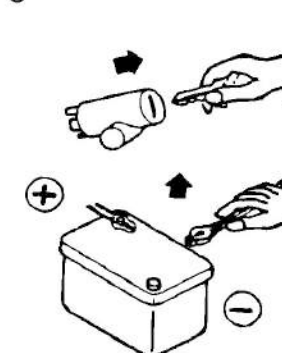

6

**The warning is voltage lower 11.5V.

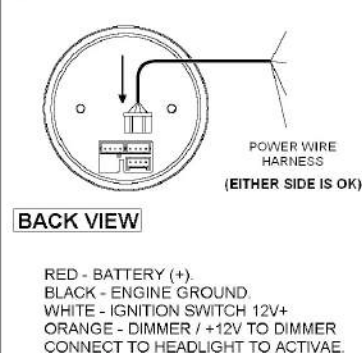

7

