

INSTALLATION INSTRUCTIONS


ELECTRICAL GAUGES

STEPMOTOR MOVEMENT JAPAN


SMOKE LENS SERIES WHITE & AMBER LED DISPLAY

OPENING CEREMONY


Temp Gauge

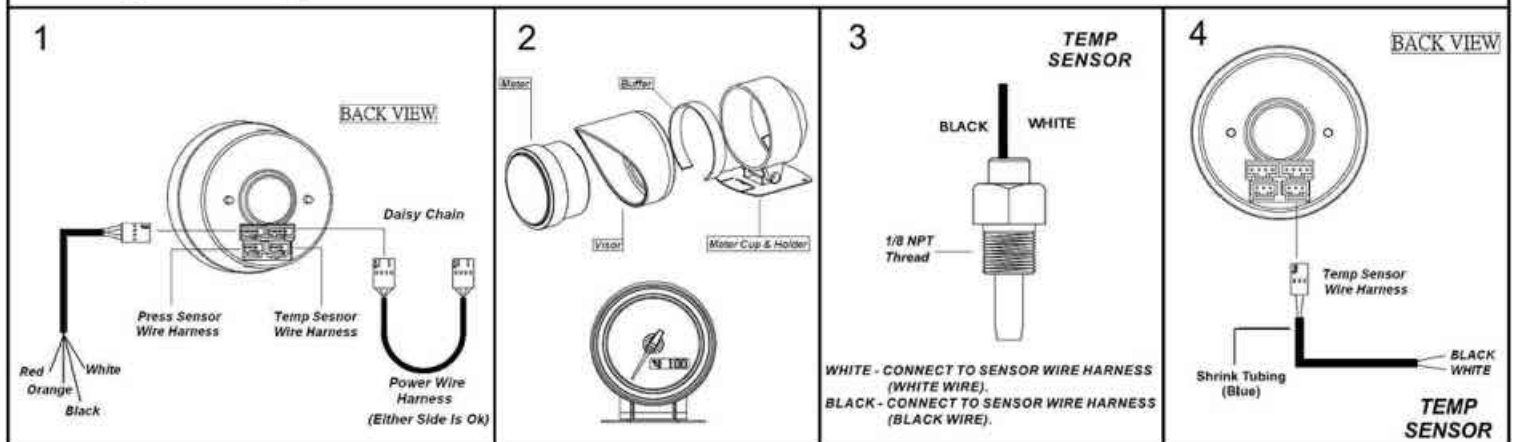

Press Gauge For Oil Press

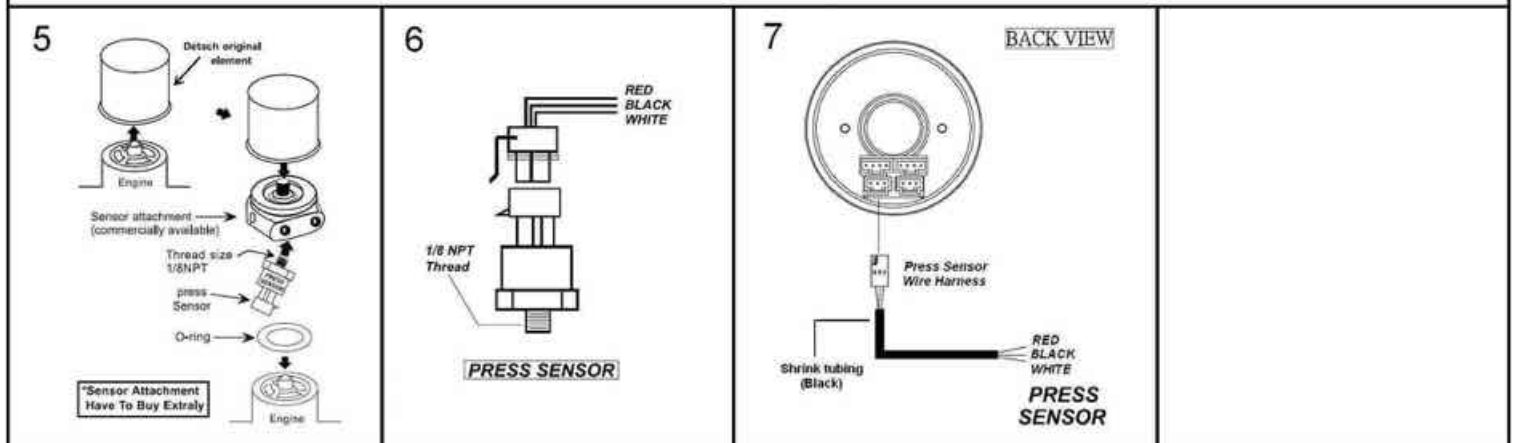

Press Gauge For Fuel Press

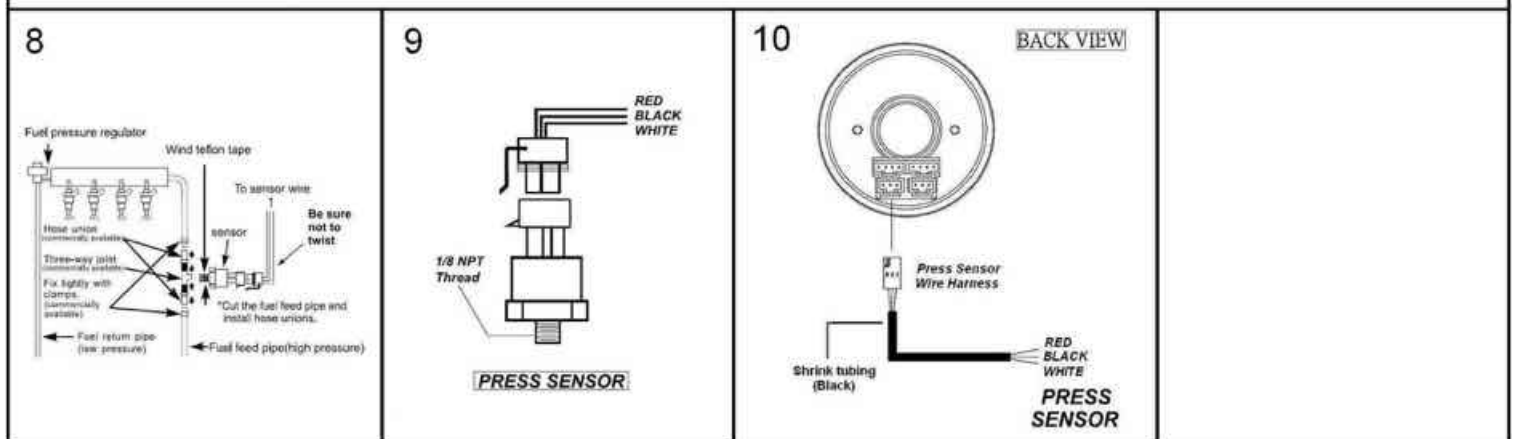

1. Connect power wire (RED) to +12V battery wire.
2. Connect power wire (BLACK) to ground, negative (-) battery terminal or a good chassis ground.
3. ORANGE - Note
4. WHITE - Note



NOTE: GAUGE REQUIRE FUNCTION

REQUIRE FUNCTION		DETAILATION
DAYTIME	ROCKET TIME	
WHITE SCALE	WHITE SCALE	WHITE WIRE -> CONNECT TO ACC
		ORANGE WIRE -> NO CONNECT
AMBER RED	AMBER RED	WHITE WIRE -> NO CONNECT
SCALE	SCALE	ORANGE WIRE -> CONNECT TO ACC
WHITE SCALE	AMBER RED	WHITE WIRE -> CONNECT TO ACC
	SCALE	ORANGE WIRE -> CONNECT TO PARKING LAMP
AMBER RED	WHITE SCALE	ORANGE WIRE -> CONNECT TO ACC
SCALE	SCALE	WHITE WIRE -> CONNECT TO PARKING LAMP