

INSTALLATION INSTRUCTIONS

ELECTRICAL GAUGES W/ OUTER 30 LED

52mm DIGITAL OLED DISPLAY SERIES

Tachometer

DIGITAL TACHOMETER GAUGE DISPLAY RANGE:
0 ~ 10000 RPM

<p>1</p> <p>CYLINDER SELECTION SWITCH</p> <p>POWER WIRE HARNESS</p> <p>DAISY CHAIN</p> <p>POWER WIRE HARNESS (EITHER SIDE IS OK)</p> <p>BLACK - ENGINE GROUND. WHITE - IGNITION SWITCH 12V+ ORANGE - DIMMER / +12V TO DIMMER CONNECT TO HEADLIGHT TO ACTIVATE.</p> <p>BACK VIEW</p>	<p>2</p>	<p>3</p>	<p>4</p>
<p>5</p> <p>CYLINDER SELECTION SWITCH</p> <p>1. Selecting Number of Cylinders: Setting the tachometer for 4, 6 or 8 (4, 6 or 3) cylinder operation is achieved simply by sliding the switch, located on back of the tachometer body to coincide with the appropriate number of cylinders of the engine.</p> <p>2. Switch position: 0=10 cylinders, 1=1 cylinders, 2=2 cylinders 3=3 cylinders, 4=4 cylinders, 5=cylinders,.....</p> <p>3. When setting the number of cylinders for a rotary engine, set the cylinders number selection to 4 cylinders for 2 rotors, and to 6 cylinders for 3 rotors.</p> <p>4. The red or black wire MUST be removed before adjustment to the engine setting is made from the cylinder selector switch.</p>	<p>6</p> <p>CONNECTOR FOR SENSOR WIRE</p> <p>SENSOR WIRE</p> <p>WHITE</p> <p>RED CONNECTOR</p> <p>TACHOMETER SIGNAL WIRE</p> <p>ECU (ENGINE COMPUTER UNIT)</p> <p>BACK VIEW</p>	<p>7</p>	<p>8</p>

Voltmeter

DIGITAL VOLTS GAUGE DISPLAY RANGE:
8 ~ 18 V

<p>1</p> <p>POWER WIRE HARNESS</p> <p>DAISY CHAIN</p> <p>POWER WIRE HARNESS (EITHER SIDE IS OK)</p> <p>BLACK - ENGINE GROUND. WHITE - IGNITION SWITCH 12V+ ORANGE - DIMMER / +12V TO DIMMER CONNECT TO HEADLIGHT TO ACTIVATE.</p> <p>BACK VIEW</p>	<p>2</p>	<p>3</p>	<p>4</p>
<p>5</p> <p>BACK VIEW</p> <p>POWER WIRE HARNESS (EITHER SIDE IS OK)</p> <p>RED - BATTERY (+). BLACK - ENGINE GROUND. WHITE - IGNITION SWITCH 12V+ ORANGE - DIMMER / +12V TO DIMMER CONNECT TO HEADLIGHT TO ACTIVATE.</p>	<p>6</p>	<p>7</p>	