


## ELECTRICAL GAUGES W/WARNING

SMOKE LENS & ANGEL RING GAUGE SUPER WHITE LED DISPLAY


### Tachometer

### OPENING CEREMONY


#### 1 CYLINDER SELECTION SWITCH [BACK VIEW]

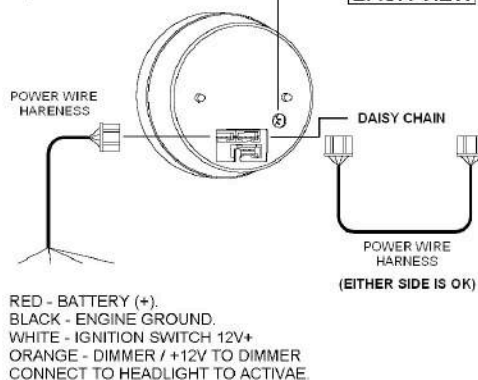


#### 2

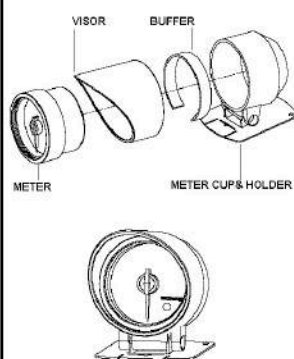


#### 3

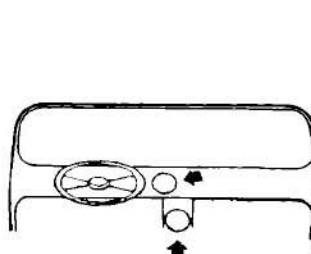

#### 4

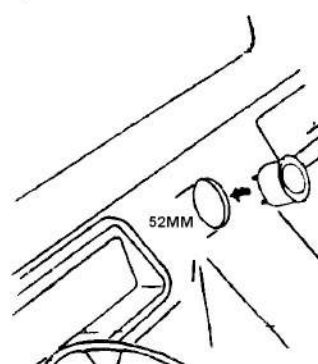


#### 5

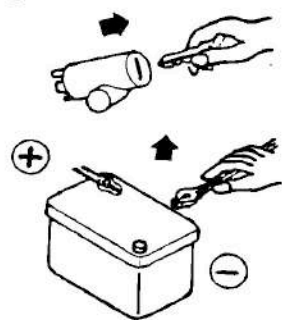


#### 6

\*\* The warning is tachometer exceed 6000RPM.

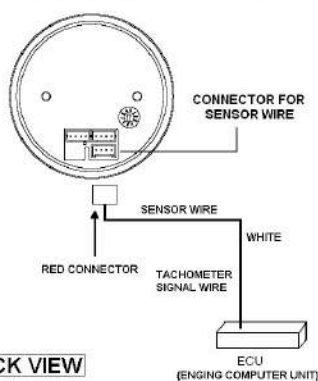


#### 7

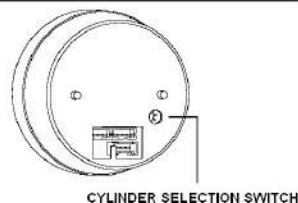

1. Selecting Number of Cylinders:  
Setting the tachometer for 4, 6 or 8 (4, 6 or 3) cylinder operation is achieved simply by sliding the switch, located on back of the tachometer body, to coincide with the appropriate number of cylinders of the engine.
2. Switch position:  
0=10 cylinders, 1=1 cylinders, 2=2 cylinders  
3=3 cylinders, 4=4 cylinders, 5=cylinders.....
3. When setting the number of cylinders for a rotary engine, set the cylinders number selection to 4 cylinders for 2 rotors, and to 6 cylinders for 3 rotors.
4. The red or black wire MUST be removed before adjustment to the cylinder setting is made from the cylinder selector switch.


#### 8

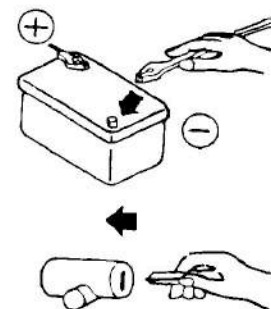


### Voltmeter

### OPENING CEREMONY


#### 1 [BACK VIEW]

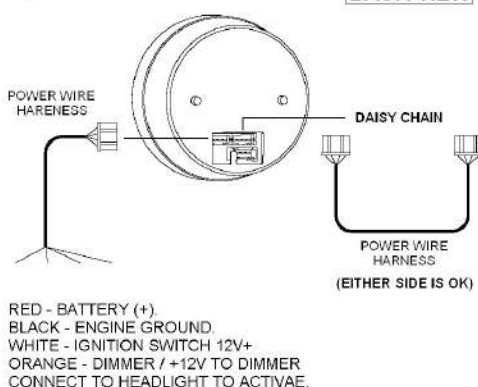


#### 2

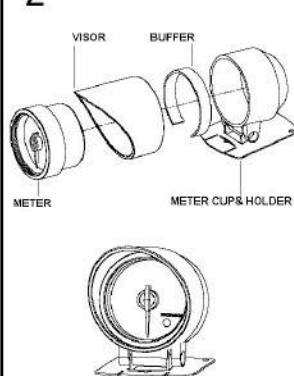


#### 3

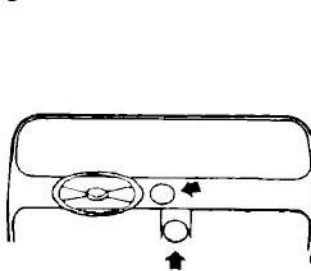

#### 4

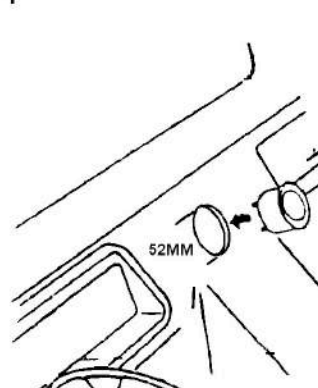


#### 5

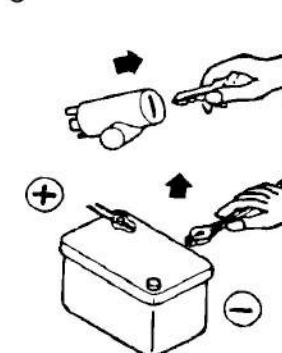

#### 6

\*\*The warning is voltage lower 11.5V.

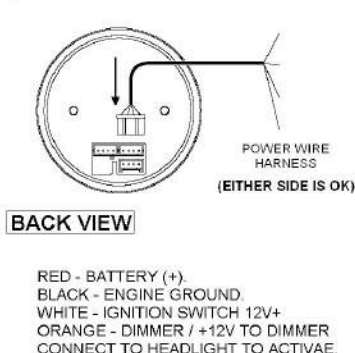

#### 7

