

INSTALLATION INSTRUCTIONS


ELECTRICAL GAUGES

STEPMOTOR MOVEMENT JAPAN


SMOKE LENS SERIES WHITE & AMBER LED DISPLAY

OPENING CEREMONY


Boots Gauge

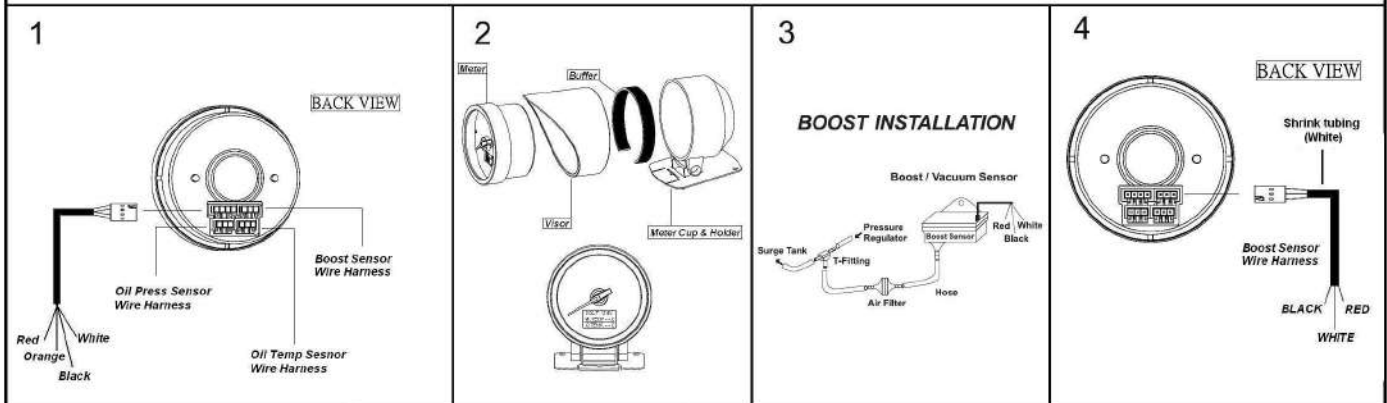

Oil Temp Gauge

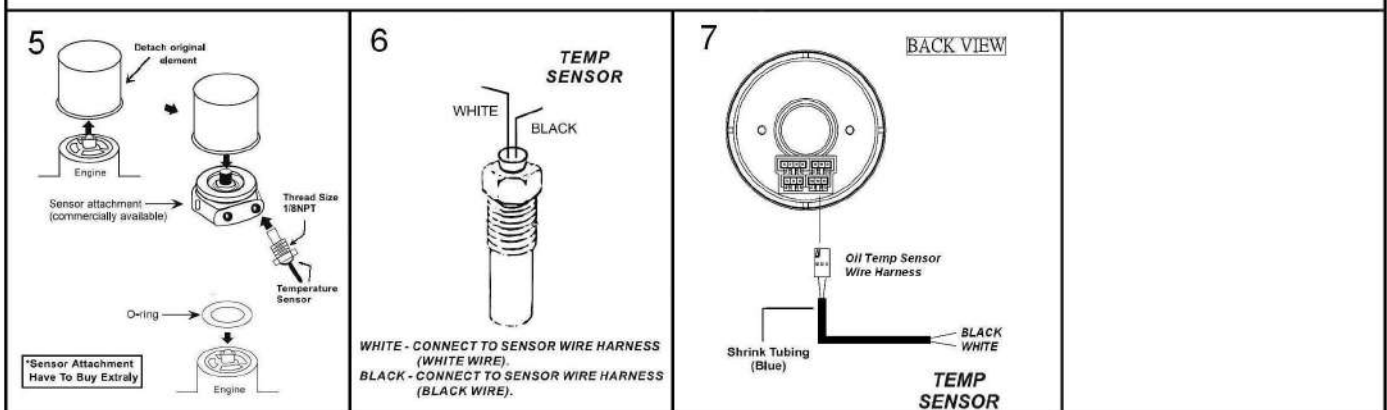

Oil Press gauge

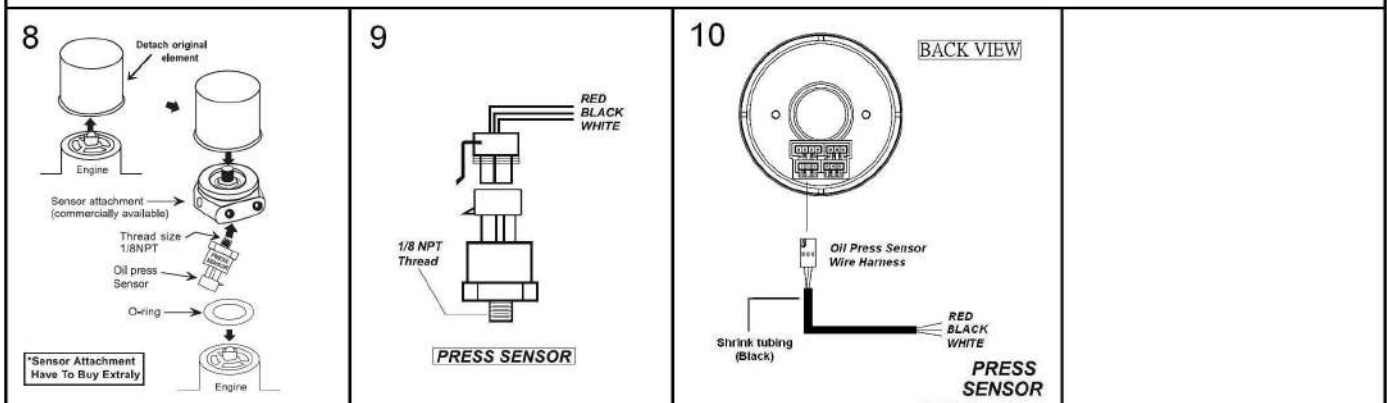

1. Connect power wire (RED) to +12V battery wire.
2. Connect power wire (BLACK) to ground, negative (-) battery terminal or a good chassis ground.
3. ORANGE - Note
4. WHITE - Note



NOTE: GAUGE REQUIRE FUNCTION

REQUIRE FUNCTION		INSTALLATION
DAYTIME	NIGHT TIME	
WHITE SCALES	WHITE SCALES	WHITE WIRE → CONNECT TO A/C
		ORANGE WIRE → NO CONNECT
AMBER RED	AMBER RED	WHITE WIRE → NO CONNECT
SCALE	SCALE	ORANGE WIRE → CONNECT TO A/C
AMBER RED	WHITE WIRE	WHITE WIRE → CONNECT TO A/C
WHITE SCALES	SCALE	ORANGE WIRE → CONNECT TO PARKING LAMP
AMBER RED	WHITE SCALES	ORANGE WIRE → CONNECT TO A/C
SCALE		WHITE WIRE → CONNECT TO PARKING LAMP