


ELECTRICAL GAUGES



SMOKE LENS SERIES AMBER RED & SUPER WHITE LED DISPLAY

Fuel Level Gauge


OPENING CEREMONY

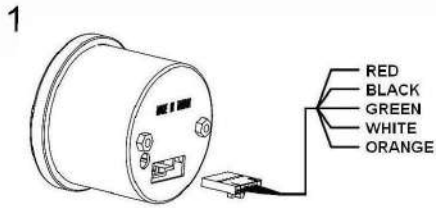

RED - TO IGNITION SWITCH 12V(+)
 BLACK - BATTERY(-)
 GREEN - FUEL LEVEL SENDER
 WHITE - NOTE
 ORANGE - NOTE

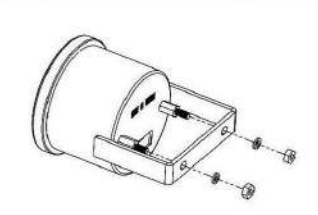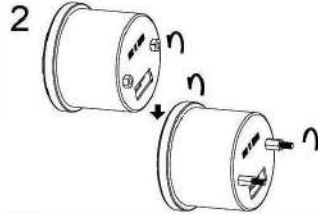


3 Fuel Level Sensor Sensitivity Switch

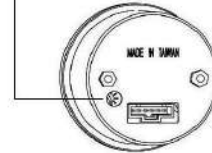


4 Use the Fuel Level Sensor Sensitivity Switch on the back of the gauge to set the correct ohm (Ω) value scale to match the rating of the vehicle's fuel level sensor.

"Empty" Ohm Value	"Full" Ohm Value	Switch #
N/A	N/A	0
73 Ω	10 Ω	1
16 Ω	158 Ω	2
0 Ω	30 Ω	3
0 Ω	90 Ω	4
240 Ω	33 Ω	5
107.5 Ω	7 Ω	6
131 Ω	12 Ω	7
0 Ω	120 Ω	8
10 Ω	180 Ω	9

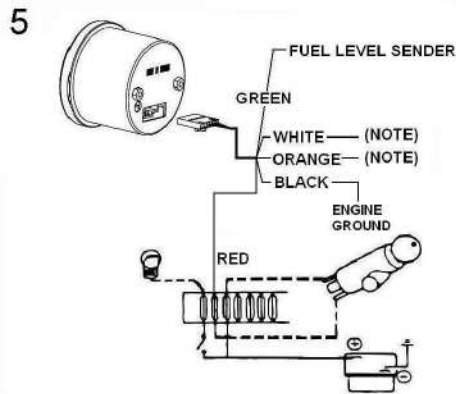

6 NOTE: GAUGE REQUIRE FUNCTION

REQUIRE FUNCTION		INSTALLATION
DAY TIME	NIGHT TIME	
WHITE SCALE	WHITE SCALE	WHITE WIRE--connect to ACC. AMBER WIRE--NO connect
AMBER SCALE	AMBER SCALE	WHITE WIRE--NO connect AMBER WIRE--connect to ACC.
WHITE SCALE	AMBER SCALE	WHITE WIRE-- connect to ACC AMBER WIRE--connect to PARKING LAMP.
AMBER SCALE	WHITE SCALE	WHITE WIRE--connect to PARKING LAMP AMBER WIRE--connect to ACC.

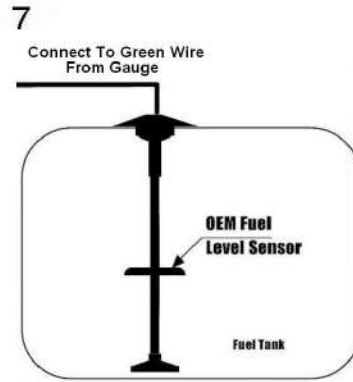

Cockpit System

MOUNTING CUP HAVE TO BUY EXTRALY

