

INSTALLATION INSTRUCTIONS


ELECTRICAL GAUGES

STEPMOTOR MOVEMENT JAPAN


SMOKE LENS SERIES WHITE & AMBER LED DISPLAY

OPENING CEREMONY


Boost Gauge

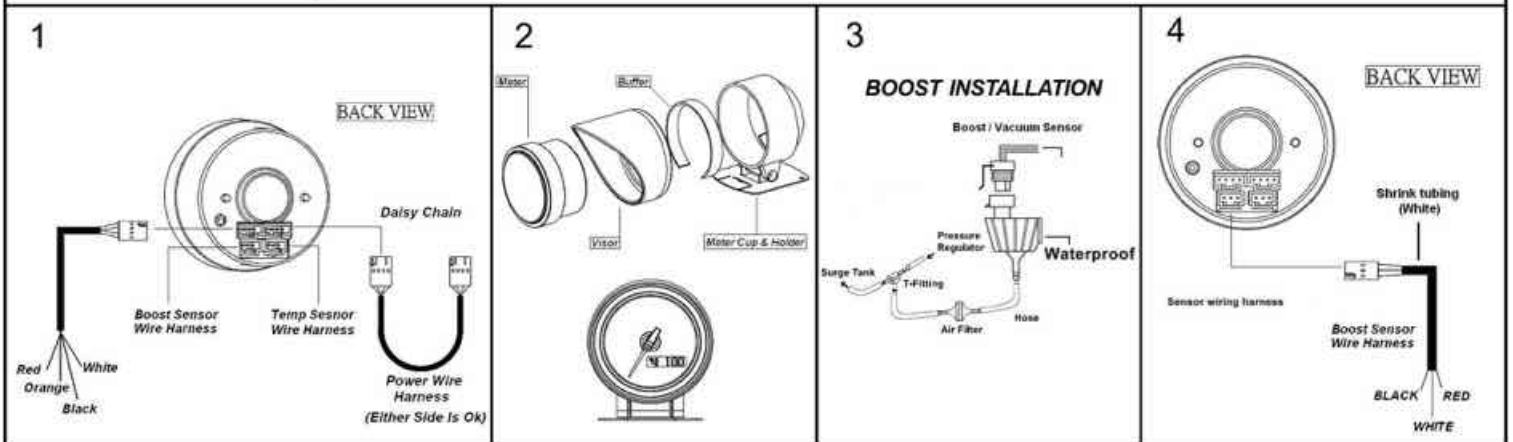

Temp Gauge For Oil Temp

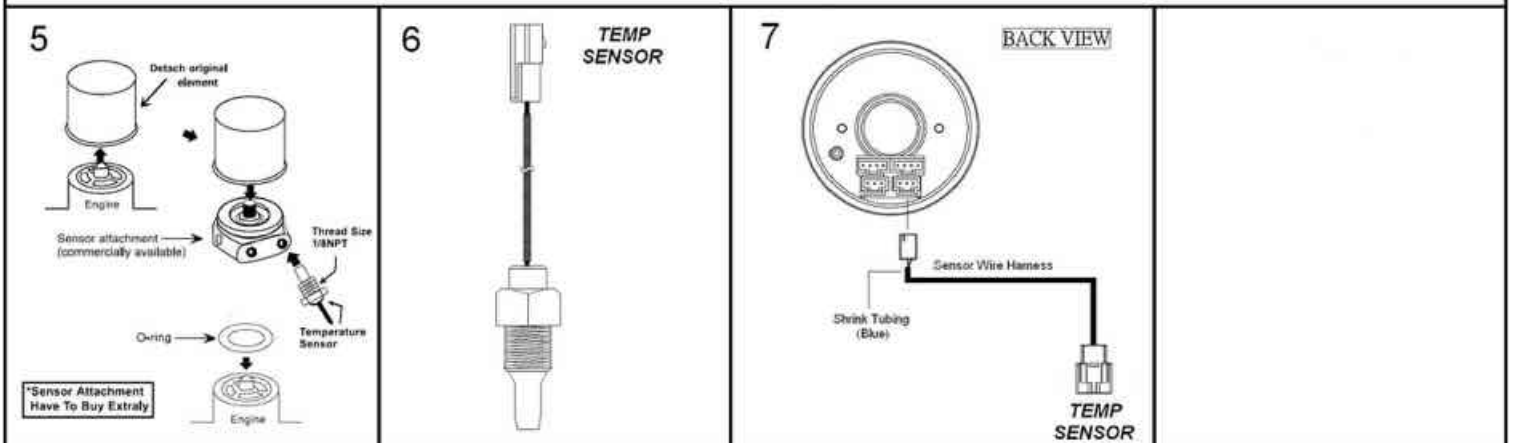

Temp Gauge For Water Temp Gauge

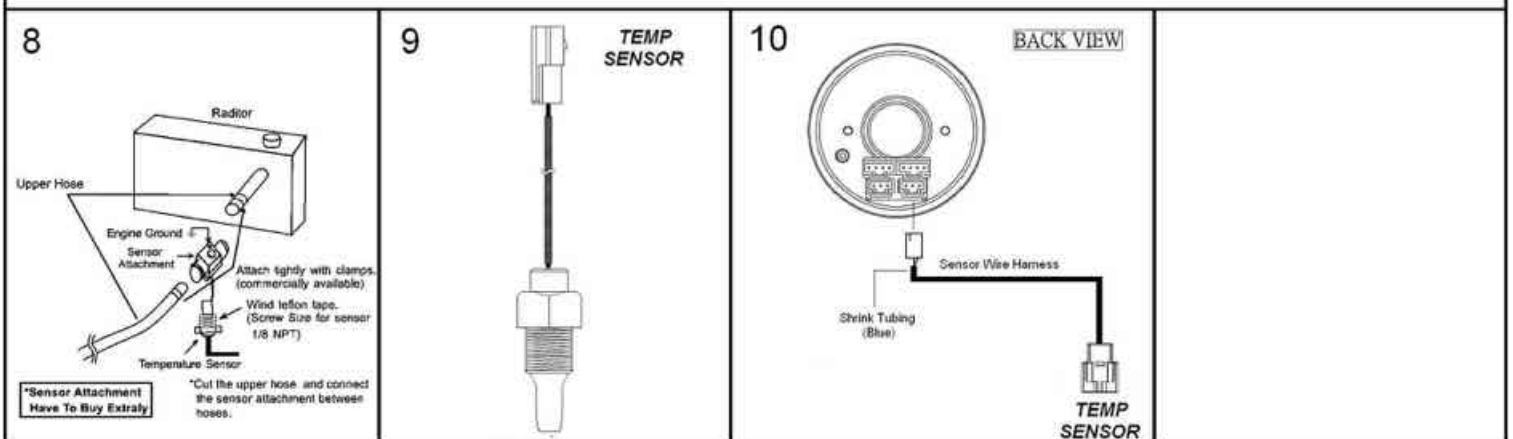

1. Connect power wire (RED) to +12V battery wire.
2. Connect power wire (BLACK) to ground, negative (-) battery terminal or a good chassis ground.
3. ORANGE - Note
4. WHITE - Note



NOTE: GAUGE REQUIRE FUNCTION

REQUIRE FUNCTION		DETAILATION
DAYTIME	ROCKET TIME	
WHITE SCALE	WHITE SCALE	WHITE WIRE → CONNECT TO ACC
		ORANGE WIRE → NO CONNECT
AMBER RED SCALE	AMBER RED SCALE	WHITE WIRE → NO CONNECT
		ORANGE WIRE → CONNECT TO ACC
WHITE SCALE	AMBER RED SCALE	WHITE WIRE → CONNECT TO ACC
		ORANGE WIRE → CONNECT TO PARKING LAMP
AMBER RED SCALE	WHITE SCALE	ORANGE WIRE → CONNECT TO ACC
		WHITE WIRE → CONNECT TO PARKING LAMP