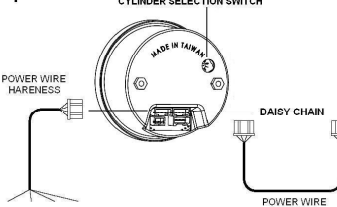
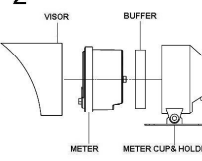
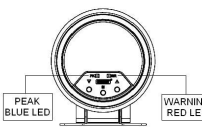
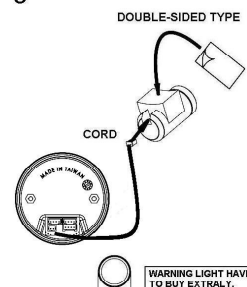
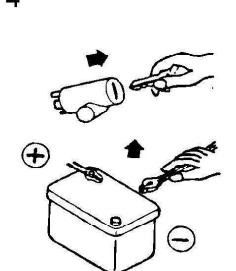

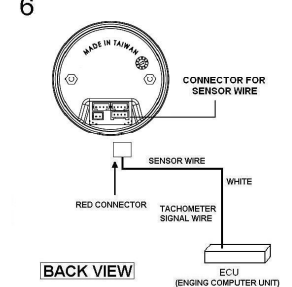
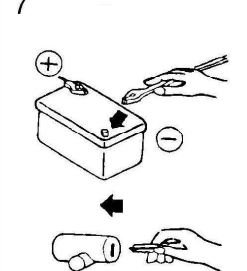
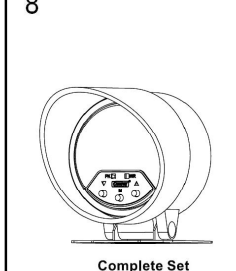


# ELECTRICAL GAUGES W/WARNING & PEAK

60mm LCD EVO SERIES WHITE / RED / GREEN / BLUE LED DISPLAY

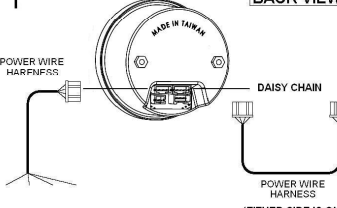
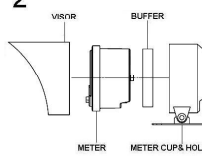
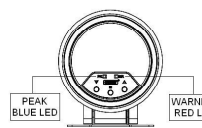
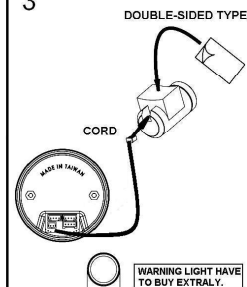
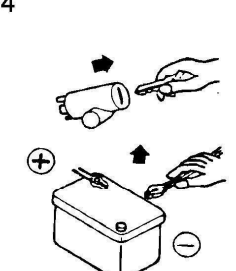
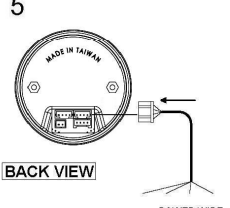
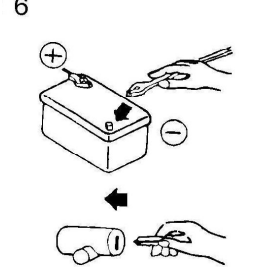
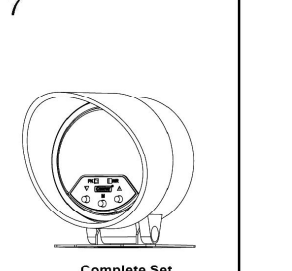
## Tachometer

### OPENING CEREMONY

<p><b>1</b></p>  <p>CYLINDER SELECTION SWITCH</p> <p>POWER WIRE HARNESS</p> <p>DAISY CHAIN</p> <p>POWER WIRE HARNESS (EITHER SIDE IS OK)</p> <p><b>BACK VIEW</b></p> <p>RED - BATTERY (+) BLACK - ENGINE GROUND. WHITE - IGNITION SWITCH 12V+ ORANGE - DIMMER / +12V TO DIMMER CONNECT TO HEADLIGHT TO ACTIVATE.</p>	<p><b>2</b></p>  <p>VISOR</p> <p>BUFFER</p> <p>METER</p> <p>METER CUP &amp; HOLDER</p>  <p>PEAK BLUE LED</p> <p>WARNING RED LED</p>	<p><b>3</b></p>  <p>DOUBLE-SIDED TYPE</p> <p>CORD</p> <p><b>WARNING LIGHT HAVE TO BUY EXTRALY.</b></p>	<p><b>4</b></p>  <p><b>Complete Set</b></p>
<p><b>5</b></p>  <p>CYLINDER SELECTION SWITCH</p> <p>1. Selecting Number of Cylinders: Setting the tachometer for 4, 6 or 8 (4, 6 or 3) cylinder operation is achieved simply by sliding the switch, located on back of the tachometer body, to coincide with the appropriate number of cylinders of the engine.</p> <p>2. Switch position: 0=10 cylinders, 1=1 cylinders, 2=2 cylinders 3=3 cylinders, 4=4 cylinders, 5=cylinders,.....</p> <p>3. When setting the number of cylinders for a rotary engine, set the cylinders number selection to 4 cylinders for 2 rotors, and to 6 cylinders for 3 rotors.</p> <p>4. The red or black wire MUST be removed before adjustment to the cylinder setting is made from the cylinder selector switch.</p>	<p><b>6</b></p>  <p>CONNECTOR FOR SENSOR WIRE</p> <p>SENSOR WIRE</p> <p>RED CONNECTOR</p> <p>WHITE TACHOMETER SIGNAL WIRE</p> <p>ECU (ENGINE COMPUTER UNIT)</p> <p><b>BACK VIEW</b></p>	<p><b>7</b></p>  <p><b>Complete Set</b></p>	<p><b>8</b></p>  <p><b>Complete Set</b></p>

## Voltmeter

### OPENING CEREMONY

<p><b>1</b></p>  <p>POWER WIRE HARNESS</p> <p>DAISY CHAIN</p> <p>POWER WIRE HARNESS (EITHER SIDE IS OK)</p> <p><b>BACK VIEW</b></p> <p>RED - BATTERY (+) BLACK - ENGINE GROUND. WHITE - IGNITION SWITCH 12V+ ORANGE - DIMMER / +12V TO DIMMER CONNECT TO HEADLIGHT TO ACTIVATE.</p>	<p><b>2</b></p>  <p>VISOR</p> <p>BUFFER</p> <p>METER</p> <p>METER CUP &amp; HOLDER</p>  <p>PEAK BLUE LED</p> <p>WARNING RED LED</p>	<p><b>3</b></p>  <p>DOUBLE-SIDED TYPE</p> <p>CORD</p> <p><b>WARNING LIGHT HAVE TO BUY EXTRALY.</b></p>	<p><b>4</b></p>  <p><b>Complete Set</b></p>
<p><b>5</b></p>  <p>POWER WIRE HARNESS (EITHER SIDE IS OK)</p> <p><b>BACK VIEW</b></p> <p>RED - BATTERY (+) BLACK - ENGINE GROUND. WHITE - IGNITION SWITCH 12V+ ORANGE - DIMMER / +12V TO DIMMER CONNECT TO HEADLIGHT TO ACTIVATE.</p>	<p><b>6</b></p>  <p><b>Complete Set</b></p>	<p><b>7</b></p>  <p><b>Complete Set</b></p>	

## 60mm EVO SERIES OPERATION INSTRUCTIONS

There are five setting modes in this gauge, **Backlight color Mode**, **Peak Mode**, **Warning Mode**, **Backlight Brightness Mode**, and **Sound Mode**. In any time when the gauge is in the normal mode, the Backlight color Mode can be operated by pressing <▲> or <▼>. Press <M> to enter into the Peak Mode.

### 1. Backlight color Mode:

- 1) There are four different color LED backlight display in one gauge: White, Red ,Green and Blue.
- 2) Press <▲> or <▼>to select a backlight color in sequence.

### 2. Peak Mode:

- 1) Press <M> to enter into the Peak Mode.
- 2) After 5-second of no button activity or press <M>, the gauge will return to the normal mode.
- 3) When the peak value is displayed, press and hold <M> 3-second to clear the previous peak value.

### 3. Warning Mode:

- 1) Hold <M> for 3-second to enter to the warning mode.
- 2) When the WR LED is flashing, press <▲> or <▼> to adjust the warning value.
- 3) Press <M> or after 5-second of no button activity, the gauge will return to the normal mode.

### 4. Backlight Brightness Mode

There are six-stage for each daytime and nighttime backlight brightness available for users to select the preferred brightness.

- 1) Hold <▲> for 3-second to enter to the backlight brightness mode. When the PK and WR LED are flashing, the daytime brightness can be selected.
- 2) Press either <▲> or <▼> to select the backlight brightness.
- 3) In order to set the nighttime backlight brightness, the orange wire of the power wire harness should be connected to Dimmer/ 12V switched source (+).
- 4) When Dimmer/ 12V switched source (+) is on, the nighttime brightness can be selected.
- 5) Press <M> or after 5-second of no button activity, the gauge will return to the normal mode.

### 5. Sound Mode:

- 1) Hold <▼> for 3-second to switch the sound.
- 2) When the sound is enabled, you will hear two beep, vise versa, when it is disabled, you will hear one beep sound.