


ELECTRICAL GAUGES W/WARNING & PEAK

60mm LCD EVO SERIES WHITE / RED / GREEN / BLUE LED DISPLAY

Oil Pressure Gauge

OPENING CEREMONY

1

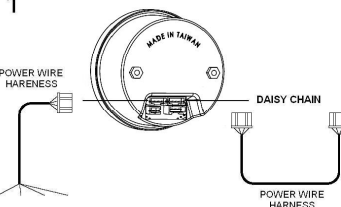

POWER WIRE HARNESS


DAISY CHAIN

POWER WIRE HARNESS (EITHER SIDE IS OK)

BACK VIEW

RED - BATTERY (+)
BLACK - ENGINE GROUND
WHITE - REFERENCE FIGURE 7
ORANGE - REFERENCE FIGURE 7

2

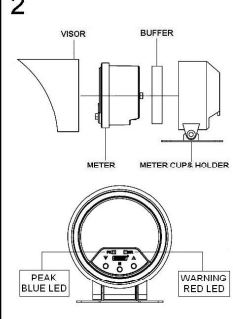

VISOR

BUFFER


METER

METER CUPS HOLDER

PEAK BLUE LED

WARNING RED LED

3

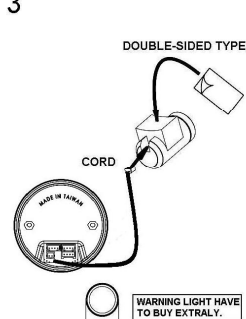


DOUBLE-SIDED TYPE

CORD

WARNING LIGHT HAVE TO BUY EXTRALY.

4

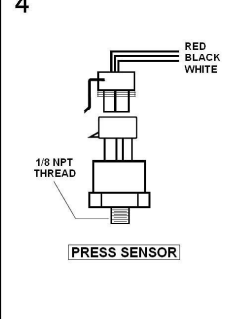


RED
BLACK
WHITE

1/8 NPT THREAD

PRESS SENSOR

5

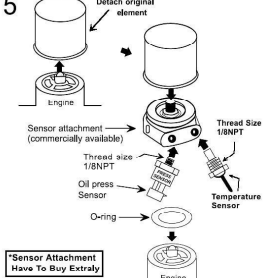

Detach original element

Engine

Sensor attachment (commercially available)

Thread size 1/8NPT


Oil press Sensor

Temperature Sensor

O-ring

***Sensor Attachment Have To Buy Extraly**

6

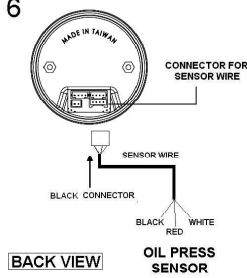

CONNECTOR FOR SENSOR WIRE

SENSOR WIRE


BLACK CONNECTOR

BLACK RED WHITE

OIL PRESS SENSOR

BACK VIEW

7

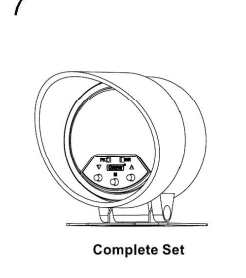


Complete Set

Oil / Water Temperature Gauge

OPENING CEREMONY

1

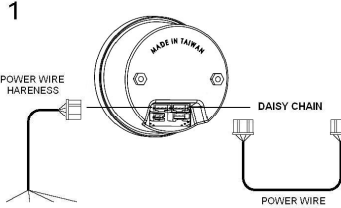

POWER WIRE HARNESS


DAISY CHAIN

POWER WIRE HARNESS (EITHER SIDE IS OK)

BACK VIEW

RED - BATTERY (+)
BLACK - ENGINE GROUND
WHITE - REFERENCE FIGURE 7
ORANGE - REFERENCE FIGURE 7

2

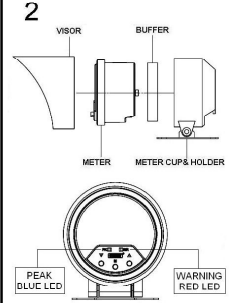

VISOR

BUFFER


METER

METER CUPS HOLDER

PEAK BLUE LED

WARNING RED LED

3

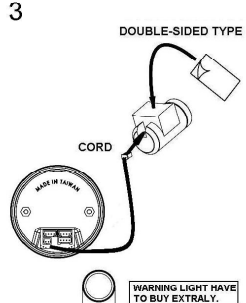


DOUBLE-SIDED TYPE

CORD

WARNING LIGHT HAVE TO BUY EXTRALY.

4

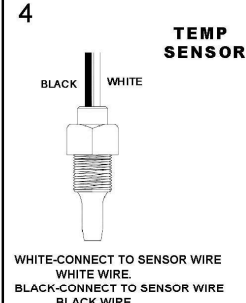


TEMP SENSOR

BLACK WHITE

WHITE-CONNECT TO SENSOR WIRE
WHITE WIRE.
BLACK-CONNECT TO SENSOR WIRE
BLACK WIRE.

5

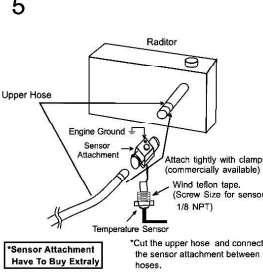

Radiator

Upper Hose

Engine Ground

Sensor Attachment

Attach tightly with clamps (commercially available)


Wind teflon tape. (Screw Size for sensor 1/8 NPT)

Temperature Sensor

***Sensor Attachment Have To Buy Extraly**

***Cut the upper hose and connect the sensor attachment between hoses.**

6

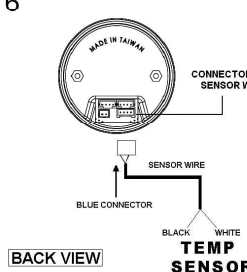

CONNECTOR FOR SENSOR WIRE

SENSOR WIRE


BLUE CONNECTOR

BLACK WHITE

TEMP SENSOR

BACK VIEW

7

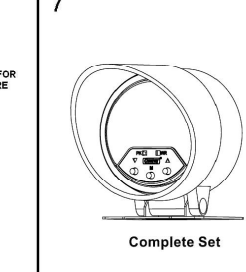

Complete Set

60mm EVO SERIES OPERATION INSTRUCTIONS

There are five setting modes in this gauge, **Backlight color Mode**, **Peak Mode**, **Warning Mode**, **Backlight Brightness Mode**, and **Sound Mode**. In any time when the gauge is in the normal mode, the Backlight color Mode can be operated by pressing <▲> or <▼>. Press <M> to enter into the Peak Mode.

1. Backlight color Mode:

- 1) There are four different color LED backlight display in one gauge: White, Red ,Green and Blue.
- 2) Press <▲> or <▼> to select a backlight color in sequence.

2. Peak Mode:

- 1) Press <M> to enter into the Peak Mode.
- 2) After 5-second of no button activity or press <M>, the gauge will return to the normal mode.
- 3) When the peak value is displayed, press and hold <M> 3-second to clear the previous peak value.

3. Warning Mode:

- 1) Hold <M> for 3-second to enter to the warning mode.
- 2) When the WR LED is flashing, press <▲> or <▼> to adjust the warning value.
- 3) Press <M> or after 5-second of no button activity, the gauge will return to the normal mode.

4. Backlight Brightness Mode

There are six-stage for each daytime and nighttime backlight brightness available for users to select the preferred brightness.

- 1) Hold <▲> for 3-second to enter to the backlight brightness mode. When the PK and WR LED are flashing, the daytime brightness can be selected.
- 2) Press either <▲> or <▼> to select the backlight brightness.
- 3) In order to set the nighttime backlight brightness, the orange wire of the power wire harness should be connected to Dimmer/ 12V switched source (+).
- 4) When Dimmer/ 12V switched source (+) is on, the nighttime brightness can be selected.
- 5) Press <M> or after 5-second of no button activity, the gauge will return to the normal mode.

5. Sound Mode:

- 1) Hold <▼> for 3-second to switch the sound.
- 2) When the sound is enabled, you will hear two beep, vise versa, when it is disabled, you will hear one beep sound.