


## ELECTRICAL GAUGES



SMOKE LENS SERIES AMBER RED & SUPER WHITE LED DISPLAY

### Fuel Level Gauge

#### OPENING CEREMONY

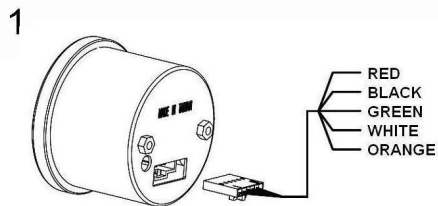


RED - TO IGNITION SWITCH 12V(+)  
BLACK - BATTERY (-)  
GREEN - FUEL LEVEL SENDER  
WHITE - NOTE  
ORANGE - NOTE

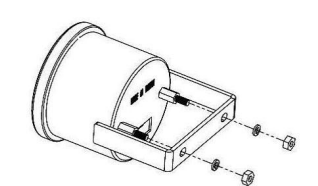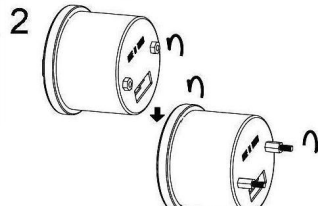


Use the Fuel Level Sensor Sensitivity Switch on the back of the gauge to set the correct ohm (Ω) value scale to match the rating of the vehicle's fuel level sensor.

| "Empty" Ohm Value | "Full" Ohm Value | Switch # |
|-------------------|------------------|----------|
| N/A               | N/A              | 0        |
| 73 Ω              | 10 Ω             | 1        |
| 16 Ω              | 158 Ω            | 2        |
| 0 Ω               | 30 Ω             | 3        |
| 0 Ω               | 90 Ω             | 4        |
| 240 Ω             | 33 Ω             | 5        |
| 107.5 Ω           | 7 Ω              | 6        |
| 131 Ω             | 12 Ω             | 7        |
| 0 Ω               | 120 Ω            | 8        |
| 10 Ω              | 180 Ω            | 9        |

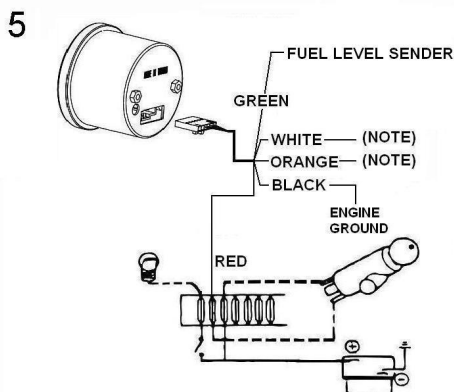

NOTE: GAUGE REQUIRE FUNCTION

| REQUIRE FUNCTION |             | INSTALLATION                                                        |
|------------------|-------------|---------------------------------------------------------------------|
| DAY TIME         | NIGHT TIME  |                                                                     |
| WHITE SCALE      | WHITE SCALE | WHITE WIRE--connect to ACC.<br>AMBER WIRE--NO connect               |
| AMBER SCALE      | AMBER SCALE | WHITE WIRE--NO connect<br>AMBER WIRE--connect to ACC.               |
| WHITE SCALE      | AMBER SCALE | WHITE WIRE--connect to ACC.<br>AMBER WIRE--connect to PARKING LAMP. |
| AMBER SCALE      | WHITE SCALE | WHITE WIRE--connect to PARKING LAMP<br>AMBER WIRE--connect to ACC.  |

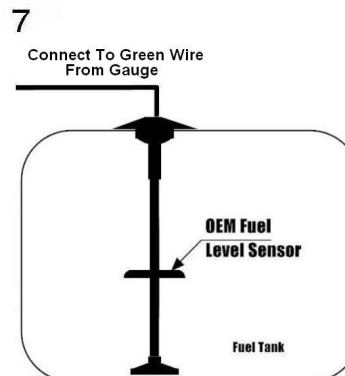

### Cockpit System

MOUNTING CUP  
HAVE TO BUY EXTRALY

